

## cleaning, care & reconditioning

---

### CLEANING – CUBIC PERMAWOOD

1. Remove any loose dust or debris from the surface.
2. Clean with warm water and dry with a soft, t-shirt style cloth.
3. Never use a pressure washer.
4. A few drops of mild dish soap may be added to the water to remove stubborn stains.
5. For heavily soiled areas, use a teaspoon of vinegar in water, or a 1:2 mixture of baking soda and water, to lift stubborn marks and stains.
6. Always test a small, inconspicuous area first.

### WOOD CLADDING CARE

Clean the surface with a soft cloth first, wiping in the direction of the wood grain.

Use a teak wood cleaner, available through most retailers, to clean the surface. The cladding can then be oiled with a teak oil to maintain the bright color and finish.

Natural greying and fading is normal on wooden cladding.

### CERAMIC SURFACES

Remove any loose debris from the surface. Use a soft t-shirt style cloth or rag and avoid all abrasives.

A ceramic or sintered surface cleaner, available at most retailers, may be used.

### REPROCESSING

Damage to the paint can be repaired with the paint bottle supplied. The lacquer bottle must be shaken well before use.

Damage to the wood can be sanded and repaired with fine sandpaper.

Damage to the ceramic worktop can be repaired with special glue.

In case of major damage, it is also possible to have the component repaired or replaced in the CUBIC Outdoor Living workshop. Please contact [info@eggersmannusa.com](mailto:info@eggersmannusa.com) directly for this.