

 


 
eggersmann maintenance guide



1.

Cleaning with a seamless microfiber cloth that doesn't have any dyes or leaves any fibers is recommended. These are available from eggersmann.

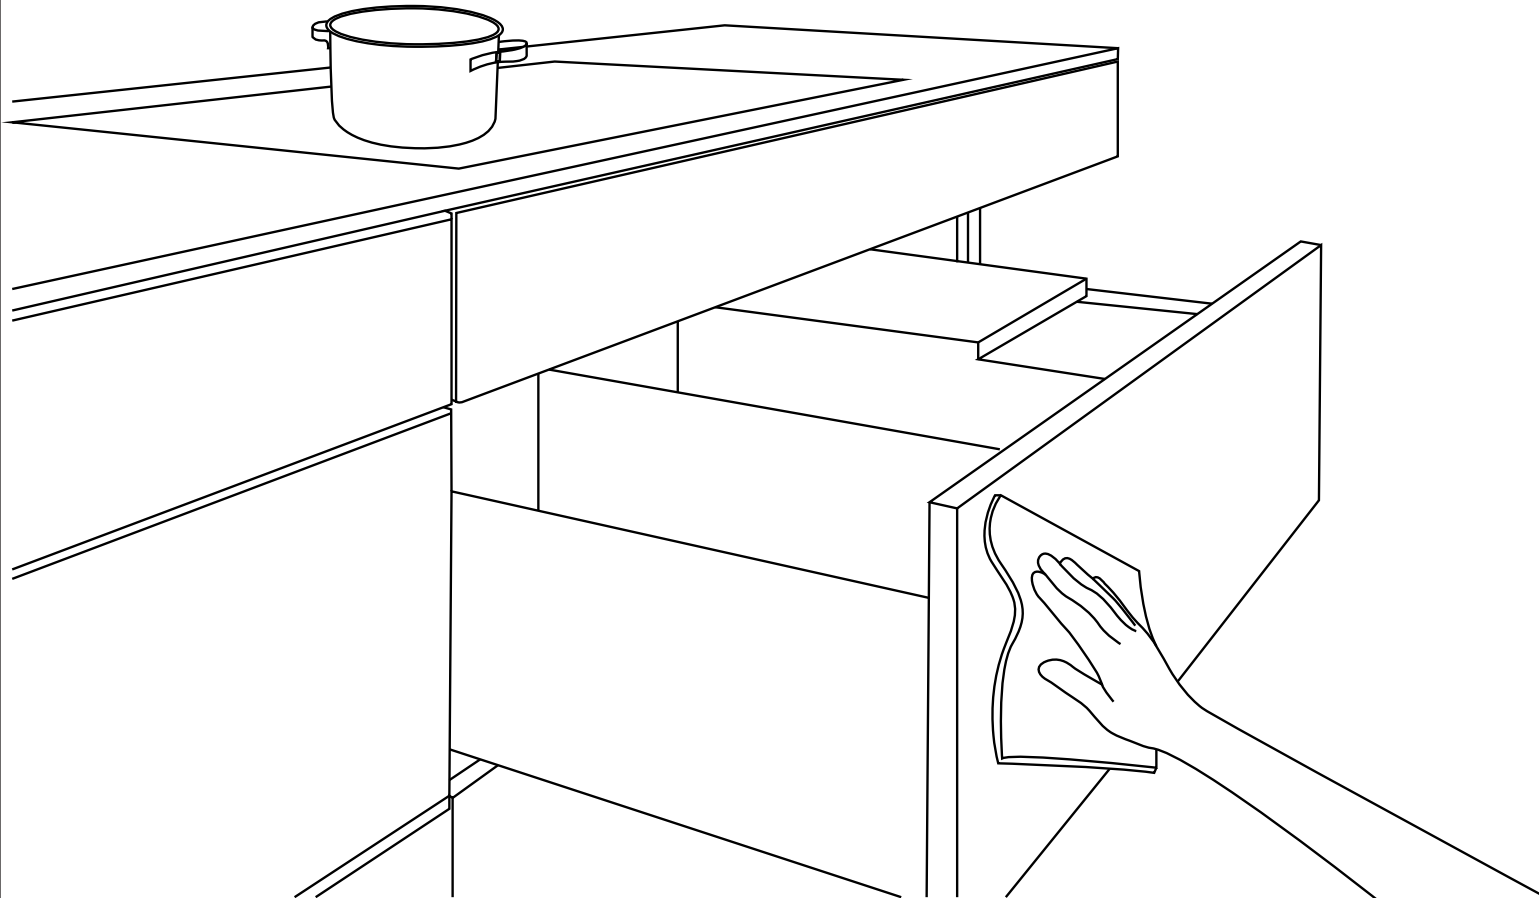

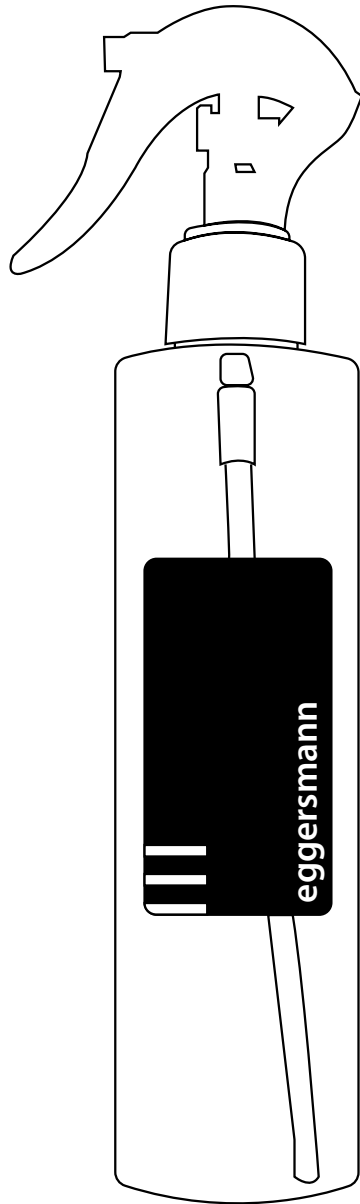

2.


Use mild cleaners and test an inconspicuous area first. We recommend using eggersmann cleaning products. We have created a specialized cleaner for every surface.


Avoid abrasive cleaners containing bleach, ammonia, or acids. Do not use harsh scrubbing materials such as brillo, steel wool, or scrubbing brushes.



3.

No running water poured in or on cabinetry. If water gets on the surface wipe immediately.

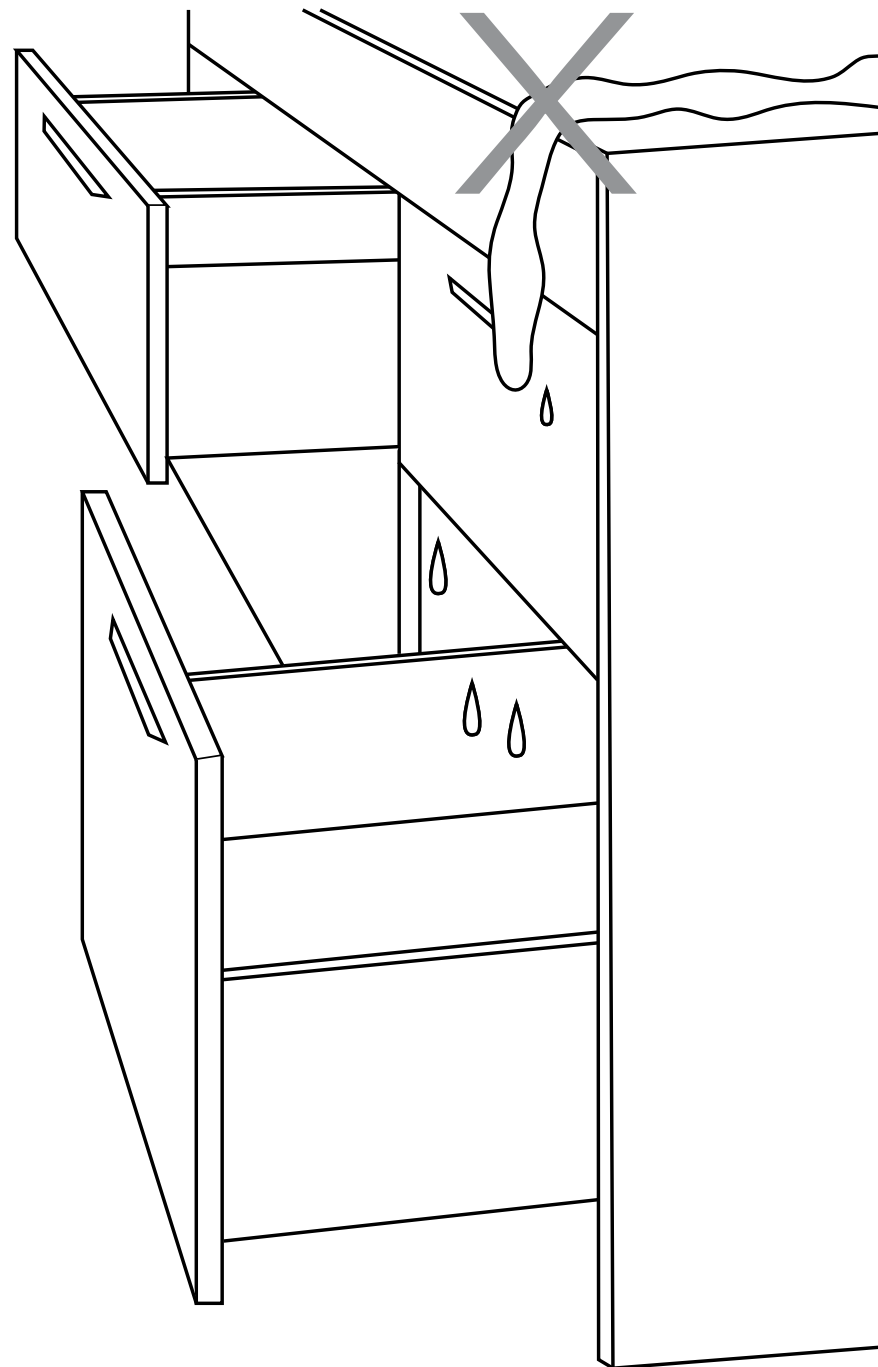


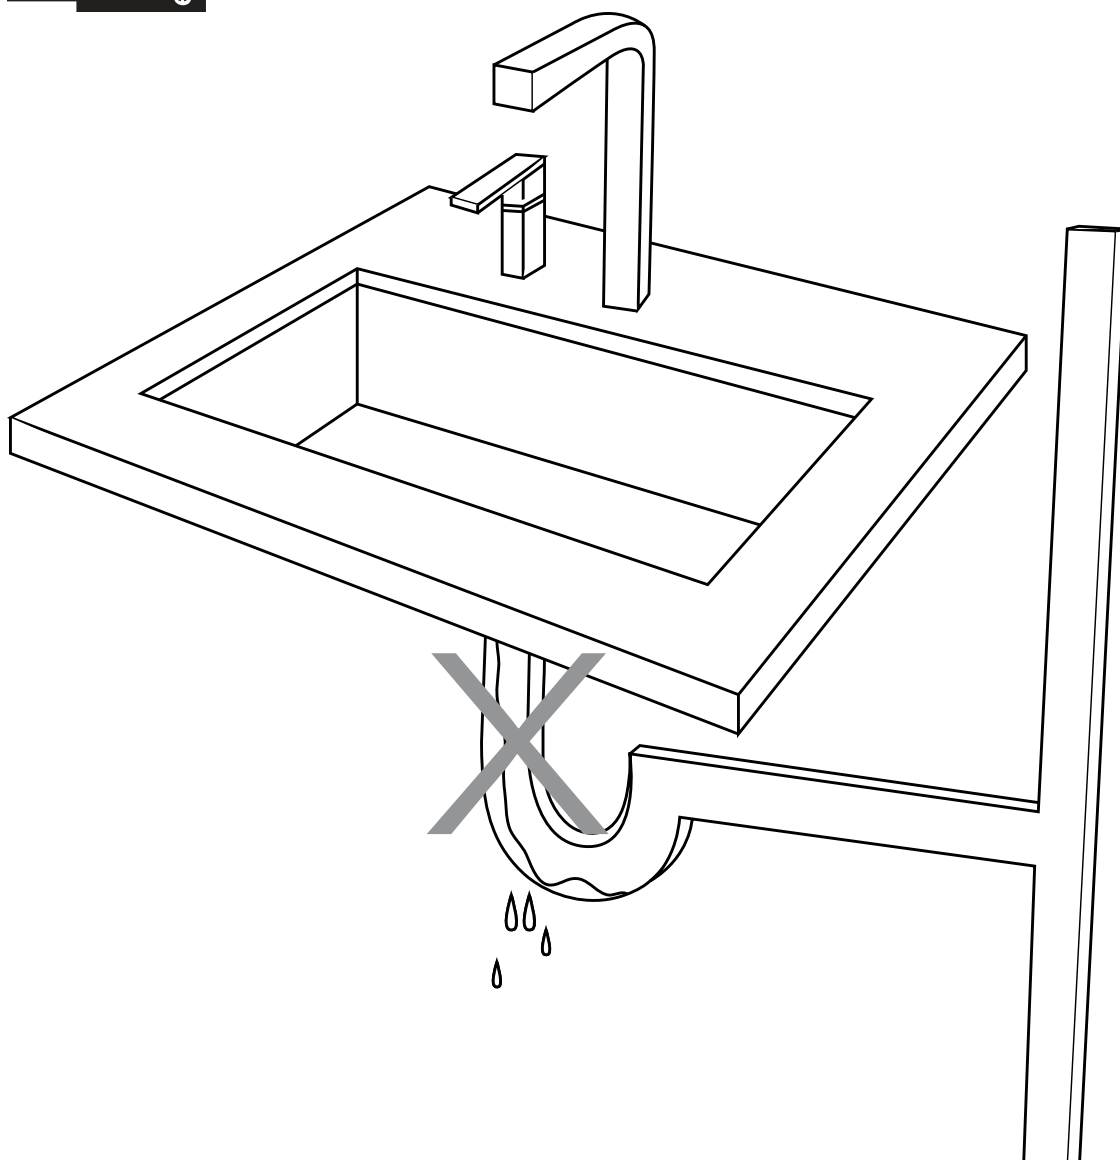

4.
Attend to leaks promptly.


5.

Toekick and plinth panels are gasket sealed to the floor. Be cautious when mopping around panels that touch the floor as these should not absorb water.

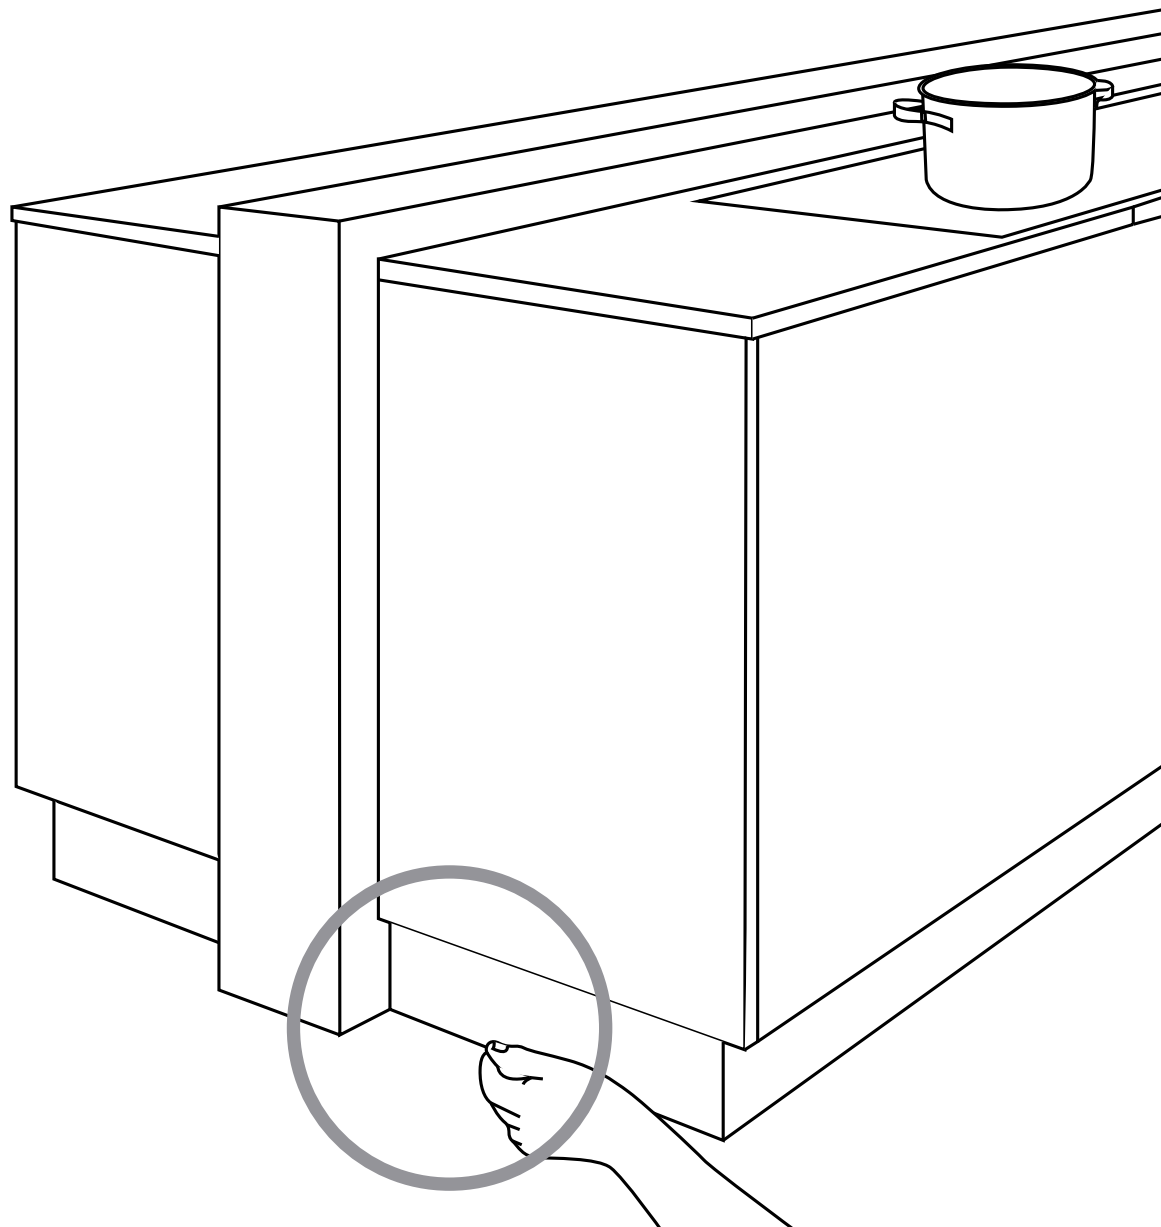

6.


Avoid putting downward force onto the door hinges as they are designed to support the weight of the door only.

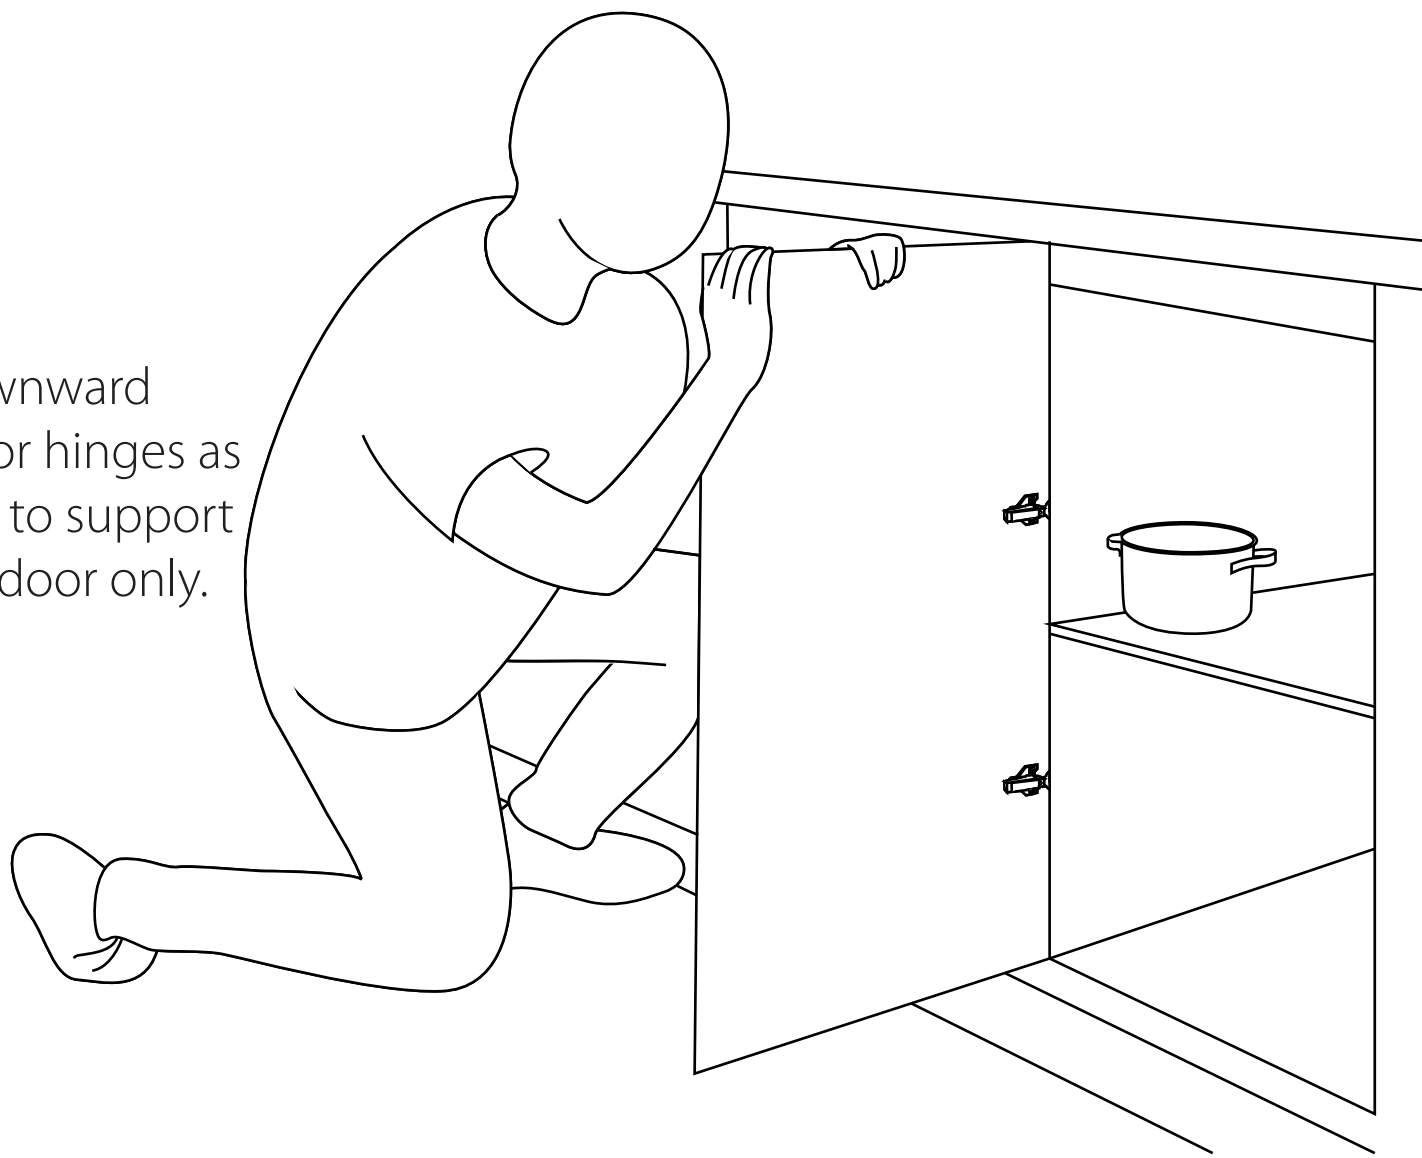



7.

Do not overextend the door hinge.
Max extension is 105 degree and 155
degree depending on your hinge.
You will detect resistance and it will
be obvious to stop.

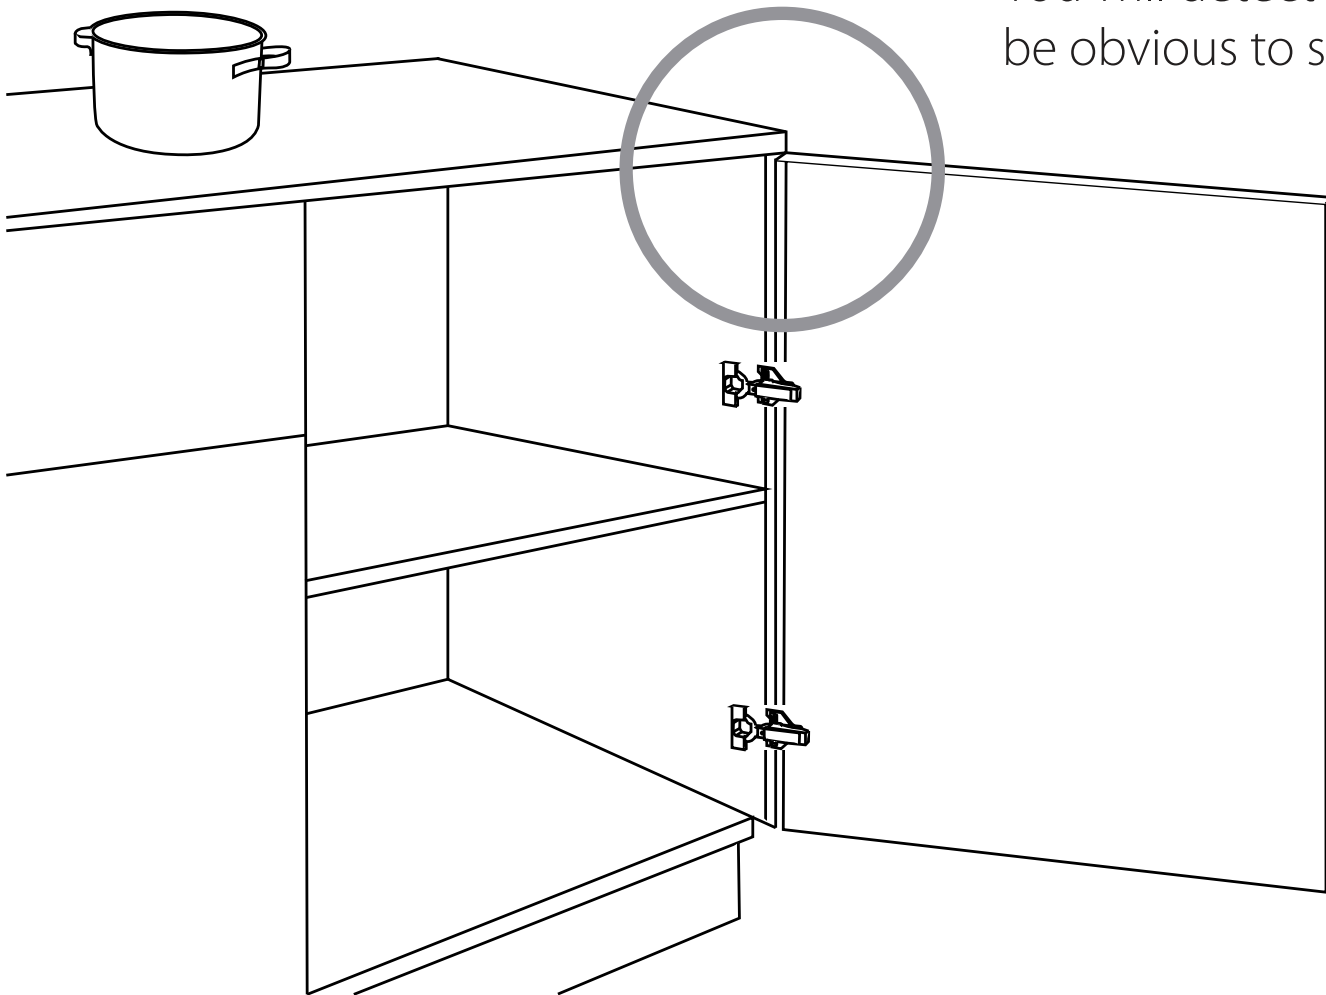

8.

If home or kitchen is under renovation, cabinets should be covered and protected to avoid damage.



9.

Load weight in drawers evenly and not all to one side or the other. This causes the drawer hardware to glide unevenly and the drawer to not operate properly.

